


# Easy Wiring Instructions

Rev. J3

1. Locate your old horn power wire(s). You may have one or two old horns, but you only need to find the wires that go to **one** horn. Your old horn may have only one wire, or two wires. Unplug the power wires from your old horn, and plug the old horn wires into the blue wires as shown. If your horn had only one wire, plug it into either blue wire, then plug the included "one-wire adaptor" into the other blue wire. Put the other end of the adaptor wire under a screw or bolt to ground it to your chassis. The old horn mounting bolt is a good place for that.
2. Plug the red & black wires into the bottom of your new air horn compressor, as shown in the diagram below.
3. Connect the red & black battery wires to the correct battery post terminals.

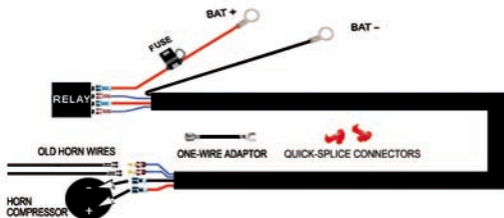

Mounting the air horn may require additional fasteners or brackets. You may have to fabricate a bracket from a strip of aluminum or stainless steel to fit your particular model of automobile or motorcycle.

**Copyright - American Mfg. Network, Inc. - All rights reserved.**

For more information on Amanet products,  
visit [www.amanet.com](http://www.amanet.com) or call 866-259-7435

**AMANET**

7001 Eton Ave., Canoga Park, CA 91303

